

## X Filter Extension Brackets

The purpose of these brackets is to either extend the X Filter to move it further away from the sump back or to be used on braced sumps.




### Step 1:

Remove and replace the extension brackets using the same screws already provided with the X Filter




### Step 2:

Loosen the screw on the back of the X Filter as shown, in order to slide in the extension spacer

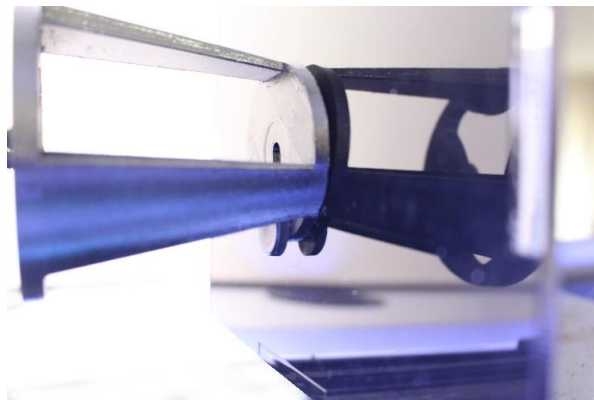


### Step 3:

Slide the spacer over the screw from the notch

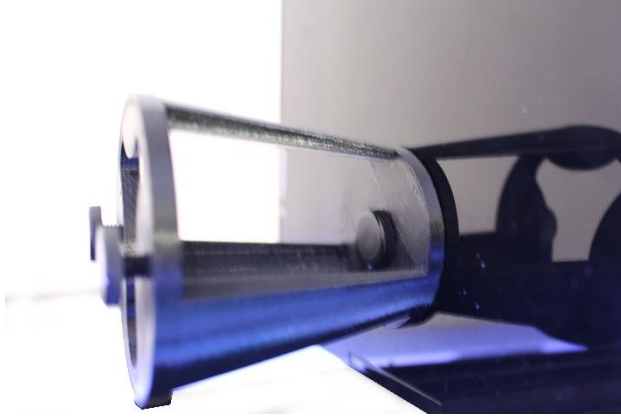


**Step 4:** Secure the spacer by tightening the screw

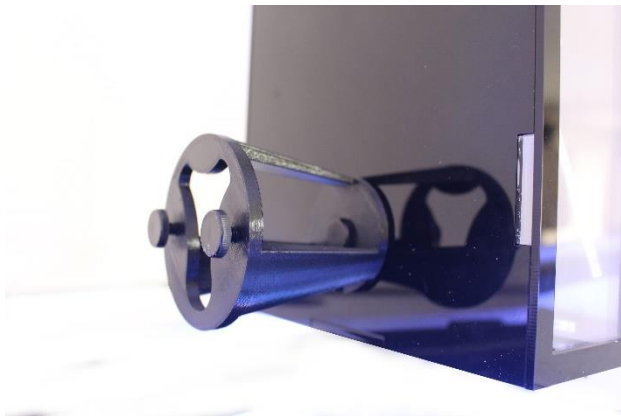

**Step 5:**

Depending on the thickness of the sump wall, adjust the two screws accordingly in order to keep the X Filter level.

**Note:** If the sump wall is thicker than 11mm (7/16"), the screws can be removed

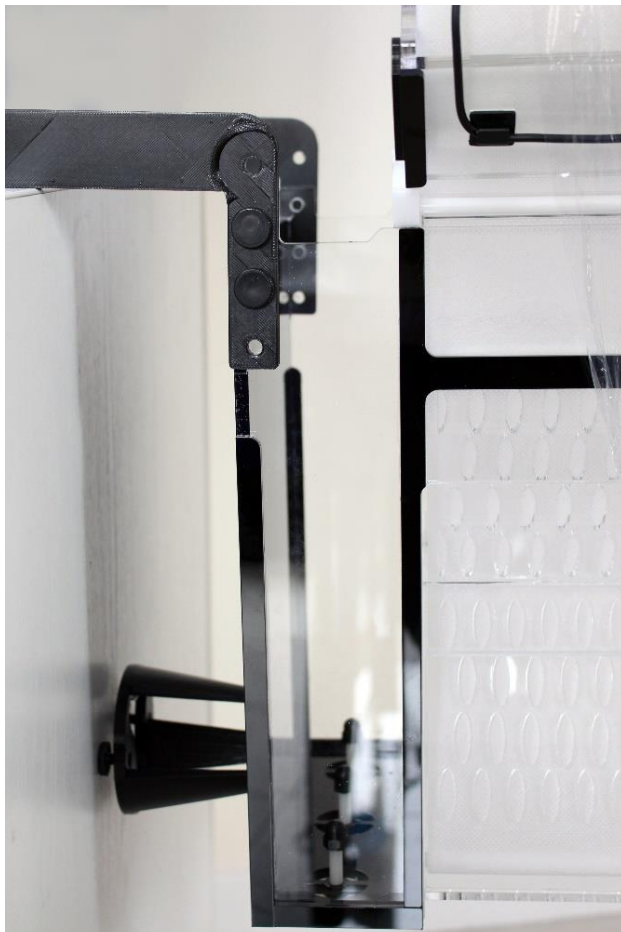

**Step 6:**

Position and install the X Filter at the desired location.

If the sump is braced, the brace will not interfere with the correct positioning of the X Filter, as there is clearance between the brackets and the spacer